

F-16C Viper Startup

ENGINE START

1. MAIN POWER – ON<
2. Canopy [LCtrl+C], Secure Canopy
3. JFS Switch – START 2
4. Throttle – IDLE [RShit+Pos1]



SYSTEM WARM-UP

5. Avionics Power Switches
6. MIDS – ON
7. EGI/INS – NORM [4 Minutes]
8. Sensor Power Panel (HDPT, FCR, RDR)
9. Stores Config CAT I/III (Light/Heavy)
10. Master Caution



HOUSEKEEPING (from left to right)

11. Probe Heat – ON
12. Formation/Position/Strobe Lights
13. IFF – NORM
14. COMM, RADIO
15. CMDS, RWR, Mode, Threat Warning
16. Taxi/Landing Lights
17. HUD Intensity
18. IFF, Datalink, Tacan
19. Bingo, Minimum Alt
20. Uncage ADI
21. Check SMS
22. Set Alt – RDR (ICP 2)
23. Consol/Inst/Flood Lights
24. Ejection Seat – DOWN



BEFORE TAKEOFF (Alignment Ready)

25. EGI INS
26. Check Control Panel
27. NWS
28. Taxi to Runway [RADIO]



TAKEOFF & POST TAKEOFF

29. Mil-Power [RADIO], 128 – 208 KIAS rotate
30. Airborne [RADIO], Gear up

